



Thinking of you
Electrolux



EOB8851AA

.....
EN STEAM OVEN

.....
USER MANUAL



CONTENTS

1. SAFETY INFORMATION	3
2. SAFETY INSTRUCTIONS	4
3. PRODUCT DESCRIPTION	6
4. BEFORE FIRST USE	8
5. CONTROL PANEL	8
6. DAILY USE	10
7. CLOCK FUNCTIONS	14
8. AUTOMATIC PROGRAMMES	15
9. USING THE ACCESSORIES	16
10. ADDITIONAL FUNCTIONS	18
11. HELPFUL HINTS AND TIPS	20
12. CARE AND CLEANING	40
13. WHAT TO DO IF...	43
14. INSTALLATION	44
15. GREAT BRITAIN & IRELAND - GUARANTEE/CUSTOMER SERVICE	47
16. EUROPEAN GUARANTEE	48

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com



Register your product for better service:
www.electrolux.com/productregistration



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

We recommend the use of original spare parts.
When contacting Service, ensure that you have the following data available.
The information can be found on the rating plate. Model, PNC, Serial Number.



Warning / Caution-Safety information



General information and tips



Environmental information

Subject to change without notice.

1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

1.1 Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised by an adult or a person who is responsible for their safety.
- Do not let children play with the appliance.
- Keep all packaging away from children.
- Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts are hot.
- If the appliance has a child safety device, we recommend that you activate it.
- Cleaning and user maintenance shall not be made by children without supervision.

1.2 General Safety

- Internally the appliance becomes hot when in operation. Do not touch the heating elements that are in the appliance. Always use oven gloves to remove or put in accessories or ovenware.
- Do not use a steam cleaner to clean the appliance.
- Before maintenance cut the power supply.

- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.
- Only use the core temperature sensor recommended for this appliance.
- To remove the shelf supports first pull the front of the shelf support and then the rear end away from the side walls. Install the shelf supports in the opposite sequence.

2. SAFETY INSTRUCTIONS

2.1 Installation



WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Do not pull the appliance by the handle.
- Keep the minimum distance from the other appliances and units.
- Make sure that the appliance is installed below and adjacent safe structures.
- The sides of the appliance must stay adjacent to appliances or to units with the same height.

Electrical connection



WARNING!

Risk of fire and electrical shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Always use a correctly installed shock-proof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Contact the Service or an electrician to change a damaged mains cable.
- Do not let mains cables to come in touch with the appliance door, specially when the door is hot.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.

2.2 Use



WARNING!

Risk of injury, burns or electric shock or explosion.

- Use this appliance in a household environment.
- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Deactivate the appliance after each use.
- Be careful, when you open the appliance door while the appliance is in operation. Hot air can release.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not apply pressure on the open door.
- Do not use the appliance as a work surface or as a storage surface.
- Always keep the appliance door closed when the appliance is in operation.
- Open the appliance door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air.
- Do not let sparks or open flames to come in contact with the appliance when you open the door.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.



WARNING!

Risk of damage to the appliance.

- To prevent damage or discoloration to the enamel:
 - do not put overware or other objects in the appliance directly on the bottom.
 - do not put aluminium foil directly on the bottom of the appliance.
 - do not put water directly into the hot appliance.
 - do not keep moist dishes and food in the appliance after you finish the cooking.
 - be careful when you remove or install the accessories.

- Discoloration of the enamel has no effect on the performance of the appliance. It is not a defect in the sense of the warranty law.
- Use a deep pan for moist cakes. Fruit juices cause stains that can be permanent.

Steam Cooking



WARNING!

Risk of burns and damage to the appliance.

- Do not open the appliance door during steam cooking. Steam can release.

2.3 Care and Cleaning



WARNING!

Risk of injury, fire or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Make sure the appliance is cold. There is the risk that the glass panels can break.
- Replace immediately the door glass panels when they are damaged. Contact the Service.
- Be careful when you remove the door from the appliance. The door is heavy!
- Clean regularly the appliance to prevent the deterioration of the surface material.
- Remaining fat or food in the appliance can cause fire.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- If you use an oven spray, obey the safety instructions on the packaging.
- Do not clean the catalytic enamel (if applicable) with any kind of detergent.

2.4 Internal light

- The type of light bulb or halogen lamp used for this appliance, is only for household appliances. Do not use it for house lighting.

**WARNING!**


Risk of electrical shock.

- Before replacing the lamp, disconnect the appliance from the power supply.
- Only use lamps with the same specifications.


2.5 Disposal**WARNING!**

Risk of injury or suffocation.


- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

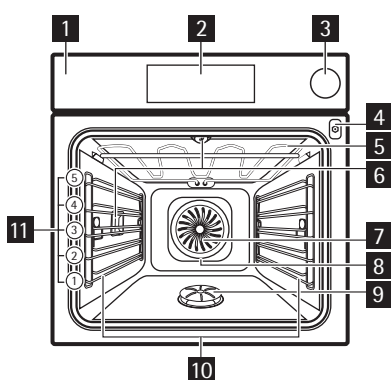3. PRODUCT DESCRIPTION


- 1** Control panel
- 2** Electronic programmer
- 3** Water drawer
- 4** Socket for the core temperature sensor
- 5** Heating element
- 6** Lamp
- 7** Fan
- 8** Rear wall heating element
- 9** Steam generator with cover
- 10** Shelf support, removable
- 11** Shelf positions

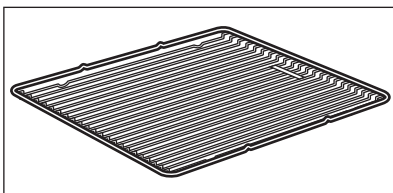3.1 Accessories**Wire shelf**

For cookware, cake tins, roasts.

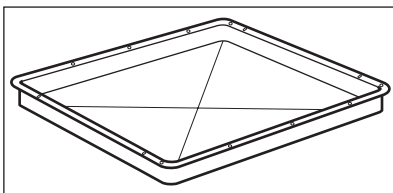
**Baking tray**

For cakes and biscuits.

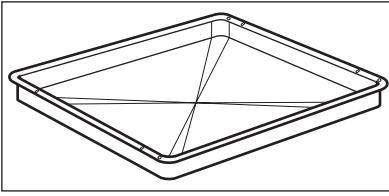

Grill- / Roasting pan

To bake and roast or as a pan to collect fat.

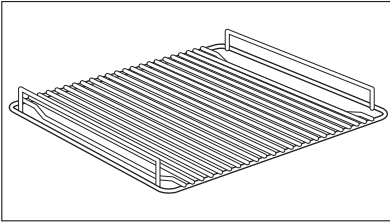


Trivet

- For roasting and grilling.




Use the trivet only with the Grill- / roasting pan.

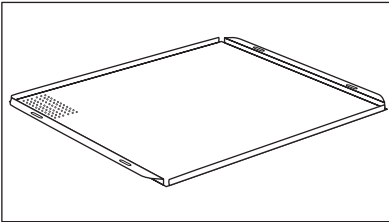


Patisserie tray

For rolls, brezels and small pastries. Suitable for steam functions. The discolouration of the surface has no effect on the functions.

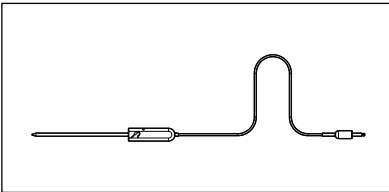


Core temperature sensor

To measure how far the food is cooked.

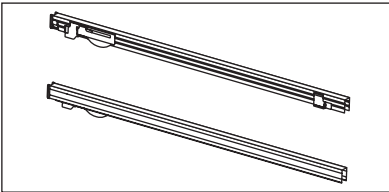

Telescopic runners

For shelves and trays.

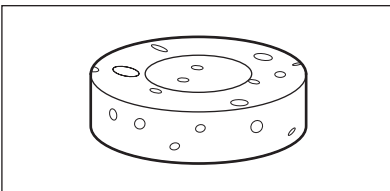

Sponge

For absorbing the remaining water from the steam generator.

4. BEFORE FIRST USE



WARNING!
Refer to the Safety chapters.

4.1 Initial Cleaning

- Remove all parts from the appliance.
- Clean the appliance before first use.




Refer to chapter "Care and Cleaning".

4.2 First Connection

When you connect the appliance to the mains or after the power cut, you have to set the language, the display contrast, the display brightness and the time of the day. Press **^** or **v** to set the value. Press **OK** to confirm.



5. CONTROL PANEL

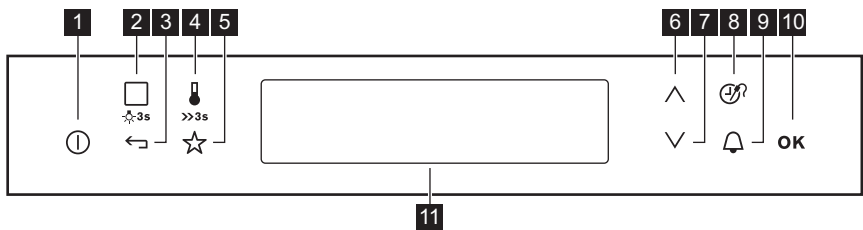Electronic programmer




Use the sensor fields to operate the appliance

Number	Sensor field	Function	Comment
1		ON / OFF	To activate and deactivate the appliance.
2		Heating Functions or Assisted Cooking	To choose a heating function or an Assisted Cooking function. To access the necessary function, touch the field once or twice when the appliance is activated. To activate or deactivate the light, touch the field for 3 seconds.
3		Home key	To go back one level in the menu. To show the main menu, touch the field for 3 seconds.
4		Temperature selection	To set the temperature or show the current temperature in the appliance. To activate or deactivate the Fast Heat Up function, touch the field for 3 seconds.
5		Favourite Programme	To save and access your favourite programmes.







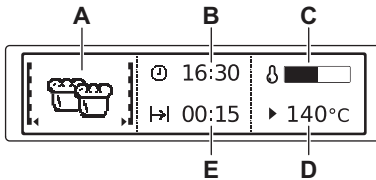


Number	Sensor field	Function	Comment
6	^	Up key	To move up in the menu.
7	v	Down key	To move down in the menu.
8		Time and additional functions	To set different functions. When a heating function operates, touch the sensor field to set the timer, Child Lock, Favourite Programme memory, Heat + Hold , Set + Go , or to change the settings of the Core Temperature Sensor.
9		Minute Minder	To set the Minute Minder .
10	OK	OK	To confirm the selection or setting.
11	-	Display	Shows the current settings of the appliance.

  Display



- A) Heating function
- B) Time of day
- C) Heat-up indicator
- D) Temperature
- E) Duration time or end time of a function

Other indicators in the display



Symbol	Function	
	Minute Minder	The function is active.
	Time of day	Shows the current time.
	Duration	Shows the time required for the cooking cycle.
	End Time	Shows when the cooking cycle ends.
	Time Indication	Shows how long the heating function operates. Press v and ^ at the same time to reset the time.
	Heat-up indicator	Indicates the temperature level in the appliance.
	Fast Heat Up Indicator	The function is active. It decreases the heat up time.
	Weight Automatic	The automatic weight system is active, or weight can be changed.
	Heat + Hold	The function is active.

6. DAILY USE




WARNING!
Refer to the Safety chapters.

6.1 Navigating the menus







- 1. Activate the appliance.
- 2. Press  or  to select the menu option.

- 3. Press **OK** to move to the submenu or accept the setting.
At each point you can go back to the









main menu with .







6.2 The menus in overview

Main menu

Symbol	Menu item	Description
	Heating Functions	Contains a list of heating functions.
	Assisted Cooking	Contains a list of automatic cooking programmes.
	Favourite Programme	Contains a list of favourite cooking programmes created by the user.
	Steam Cleaning	Cleaning with steam.
	Basic Settings	Contains a list of other settings.
	Specials	Contains a list of additional heating functions.









Submenu for: **Basic Settings**









Symbol	Submenu	Application
	Set Time of Day	Sets the current time on the clock.
	Time Indication	When ON, the display shows the current time when you deactivate the appliance.
	SET + GO	When ON, you can activate the function when you activate a heating function.
	Heat + Hold	When ON, you can activate the function when you activate a heating function.
	Extra time	Activates and deactivates the function.
	Display Contrast	Adjusts the display contrast by degrees.
	Display Brightness	Adjusts the display brightness by degrees.
	Set Language	Sets the language for the display.

Symbol	Submenu	Application
	Buzzer Volume	Adjusts the volume of press-tones and signals by degrees.
	Key Tones	Activates and deactivates the tone of the touch fields. It is not possible to deactivate the tone of the ON / OFF touch field.
	Alarm/Error Tones	Activates and deactivates the alarm tones.
	Cleaning Assistant	Guides you through the cleaning procedure.
	Service	Shows the software version and configuration.
	Factory Settings	Resets all settings to factory settings.









6.3 Heating functions

Submenu for: Heating Functions

Heating function		Application
	Full Steam	For vegetables, fish, potatoes, rice, pasta or special side-dishes.
	Half Steam + Heat	For dishes with a high moisture content and for poaching fish, custard royale and terrines.
	Quarter Steam + Heat	To bake bread, roast large pieces of meat or to warm up chilled and frozen meals.
	ECO Steam	To optimize the energy consumption during cooking. It is necessary to set the cooking time first. To get more information about the recommended settings, refer to the cooking tables with the equivalent oven function.
	Steam Regenerating	To reheat your already cooked food directly on a plate.
	Moist Fan Baking	For energy-saving baking and cooking of mainly dry bakery items as well as for baking in tins on one shelf position.
	Eco Roasting	The ECO functions let you optimize the energy consumption during cooking. It is necessary to set the cooking time first. To get more information about the recommended settings, refer to the cooking tables with the equivalent usual heating function.
	Slow Cook	For preparing especially tender, succulent roasts.

Heating function	Application
 Bottom Heat	For baking cakes with crispy or crusty bottoms and to preserve food.
 Frozen Foods	To make your convenience food like e.g. French Fries, Wedges, spring rolls crispy.
 Grilling	To grill flat food items. To toast bread.
 Fast Grilling	To grill flat food in large quantities. To toast bread.
 Turbo Grilling	To roast larger meat joints or poultry with bones on one shelf position. Also to grate and to brown.
 Conventional Cooking	To bake and roast on 1 shelf position.
 Pizza Setting	To bake food on 1 shelf position for a more intensive browning and a crispy bottom. Set the temperature 20 - 40 °C lower than for Conventional Cooking .
 True Fan Cooking	To bake maximum on 3 shelf positions at the same time and to dry food. Set the temperature 20 - 40 °C lower than for Conventional Cooking .


Submenu for: **Specials**

Heating function	Application
 Bread Baking	To bake bread.
 Au gratin	To prepare dishes like lasagna or potato gratin. Also to brown.
 Dough Proving	To raise the yeast dough before baking.
 Plate Warming	To preheat the plate for serving.
 Preserving	To make vegetable preserves, e.g. pickles.
 Drying	To dry sliced fruit (e.g. apples, plums, peaches) and vegetables (e.g. tomatoes, zucchini, mushrooms).
 Keep Warm	To keep cooked food warm.
 Defrost	To defrost frozen food.

6.4 Activating a heating function

1. Activate the appliance.
2. Select the Heating Functions menu. Press **OK** to confirm.
3. Set a heating function. Press **OK** to confirm.
4. Set the temperature. Press **OK** to confirm.



Press  to go directly to the Heating Functions menu. You can use it when the appliance is activated.

6.5 Steam cooking



The water drawer cover is in the control panel.

1. Press the cover to open the water drawer.
2. Fill the water drawer with 800 ml of water.

The water supply is sufficient for approximately 50 minutes.



Do not put water directly into the steam generator.
Use only water as the liquid. Do not use filtered (demineralised) or distilled water.

3. Activate the appliance.
4. Set the steam heating function (refer to the "Heating functions" table) and the temperature.
5. If necessary, set the function Duration  or End Time . The first steam shows after approximately 2 minutes. An acoustic signal sounds when the appliance is at approximately the set temperature. The signal sounds again at the end of the cooking time.
6. Deactivate the appliance.




When the steam generator is empty, an acoustic signal sounds.

When the appliance is cool, soak up all remaining water from the steam generator with the sponge. If necessary, clean the steam generator with vinegar. Let the appliance dry fully with the door open.

6.6 Heat-up indicator

When you activate a heating function, the bar on the display comes on. The bar shows that the temperature increases.

Fast Heat Up Indicator

This function decreases the heat-up time. To activate the function, hold  for 3 seconds. The heat-up indicator alternates.

Residual heat

When you deactivate the appliance, the display shows the residual heat. You can use the heat to keep the food warm.


6.7 Energy saving




 
 



The appliance contains features which help you save energy during everyday cooking:

• Residual heat:

- When the heating function or programme operates, the heating elements are deactivated 10% earlier (the lamp and fan continue to operate). For this feature to operate, the cooking time must be longer than 30 minutes or you must use the clock functions (Duration, End, Time delay).
- When the appliance is off, you can use the heat to keep food warm. The display shows the remaining temperature.

- **Cooking with the lamp off** - Touch and hold  for 3 seconds to deactivate the lamp during cooking.

7. CLOCK FUNCTIONS




Symbol	Function	Description
	Minute Minder	To set a countdown (max. 2 h 30 min). This function has no effect on the operation of the appliance. You can also activate it when the appliance is deactivated. Use  to activate the function. Press  or  to set the minutes and OK to start.
	Duration	To set how long the appliance has to be in operation (max. 23 h 59 min).
	End Time	To set the switch-off time for a heating function (max. 23 h 59 min).

If you set the time for a clock function, the time starts to count down after 5 seconds.



If you use the clock functions Duration and End Time , the appliance deactivates the heating elements after 90 % of the set time. The appliance uses the residual heat to continue the cooking process until the time ends (3 - 20 minutes).

Setting the clock functions

1. Set a heating function.
2. Press  again and again until the display shows the necessary clock function and the related symbol.
3. Press  or  to set the necessary time. Press **OK** to confirm. When the time ends, an acoustic signal sounds. The appliance deactivates. The display shows a message.
4. Press a sensor field to stop the signal.



Useful information:

 
- With Duration and End Time you must set the heating function and the temperature first. Then you can set the clock function. The appliance deactivates automatically.
- You can use Duration and End Time at the same time, if you want to automatically activate and deactivate the appliance on a given time later.
- When you use the Core Temperature Sensor (if applicable), the Duration and End Time functions do not work.

7.1 Heat + Hold

The Heat + Hold function keeps prepared food warm at 80 °C for 30 minutes. It activates after the baking or roasting procedure ends.

- You can activate or deactivate the function in the Basic Settings menu.
- Conditions for the function:
 - The set temperature is more than 80 °C.
 - The function Duration is set.

Activating the function

1. Activate the appliance.
2. Select the heating function.
3. Set the temperature above 80 °C.
4. Press  again and again until the display shows Heat + Hold . Press **OK** to confirm.

When the function ends, an acoustic signal sounds.

The Heat + Hold function stays on if you change the heating functions.

7.2 Extra Time

The Extra Time makes the heating function continue after the Duration ends.

- Applicable for all heating functions with Duration or Weight Automatic .
- Not applicable for heating functions with the core temperature sensor.

Activating the function:

1. When the cooking time ends, an acoustic signal sounds. Press a sensor field.
2. The display shows the message for Extra Time for five minutes.

3. Press  to activate (or  to cancel).

4. Set the Extra Time period. Press **OK** to confirm.

8. AUTOMATIC PROGRAMMES



WARNING!

Refer to the Safety chapters.

8.1 Automatic programmes

These 3 automatic programmes give optimum settings for each type of meat or other recipes:

- Meat programmes with Weight Automatic (Assisted Cooking menu) — This function automatically calculates the roasting time. To use it you need to input food weight.
- Meat programmes with CT Sensor Automatic (Assisted Cooking menu) — This function automatically calculates the roasting time. To use it you need to input core temperature. When the programme ends an acoustic signal sounds.
- Recipe Automatic (Assisted Cooking menu) — This function uses predefined values for a dish. Prepare the dish according to recipe from this book.

Weight Automatic dishes
Roast Pork
Roast Veal
Braised Meat
Roast Game
Roast Lamb
Chicken, whole
Turkey, whole
Duck, whole
Goose, whole
CT Sensor Automatic dishes
Loin of Pork
Roast Beef
Scandinavian Beef
Loin of Game
Lamb Joint, medium

CT Sensor Automatic dishes
Boned Poultry
Whole Fish



You can find the recipes for the automatic programmes specified for this appliance on our website. To find the proper Recipe Book check the PNC number on the rating plate on the front frame of the appliance cavity.

8.2 Assisted Cooking with Recipe Automatic

This appliance has a set of recipes you can use. The recipes are fixed and you cannot change them.

Activating the function:

1. Activate the appliance.
2. Select the Assisted Cooking menu. Press **OK** to confirm.
3. Select the category and dish. Press **OK** to confirm.
4. Select Recipe Automatic . Press **OK** to confirm.



When you use the Manual function, the appliance uses the automatic settings. You can change them as with other functions.

8.3 Assisted Cooking with Weight Automatic

This function automatically calculates the roasting time. To use it, it is necessary to input the food weight.

Activating the function:

1. Activate the appliance.
2. Select Assisted Cooking . Press **OK** to confirm.
3. Select the category and dish. Press **OK** to confirm.

4. Select the Weight Automatic . Press **OK** to confirm.
5. Touch **▲** or **▼** to set the food weight. Press **OK** to confirm. The automatic programme starts. You can change the weight at any time. Press **▲** or **▼** to change the weight. When

the time ends, an acoustic signal sounds. Press a sensor field to deactivate the signal.



With some programmes turn over the food after 30 minutes. The display shows a reminder.

9. USING THE ACCESSORIES



WARNING!

Refer to the Safety chapters.

9.1 Core temperature sensor

The core temperature sensor measures the core temperature of the meat. When the meat is at the set temperature, the appliance deactivates.

There are two temperatures to set:


- The oven temperature
- The core temperature



Only use the core temperature sensor supplied or the correct replacement parts.

Using the core temperature sensor:

1. Put the tip of the core temperature sensor into the centre of the meat.
2. Activate the appliance.
3. Put the plug of the core temperature sensor into the socket at the front of the appliance.

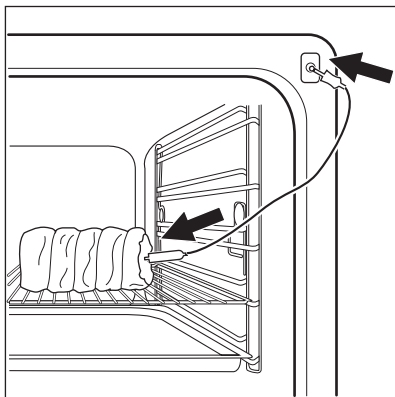

The display shows the core temperature sensor.

4. Press **▲** or **▼** in less than 5 seconds to set the core temperature.
5. Set the oven function and, if necessary, the oven temperature.

The appliance calculates an approximate end time. The end time is different for the different quantities of the food, the set oven temperatures (minimum 120 °C) and the operating modes. The appliance calculates the end time in approximately 30 minutes.



The core temperature sensor must stay in the meat and in the socket during the cooking.

6. When the meat is at the set core temperature, an acoustic signal sounds. The appliance deactivates automatically. Touch a sensor field to stop the signal.
7. Remove the core temperature sensor plug from the socket and remove the meat from the oven.




To change the core temperature, press **⌂** .




WARNING!

The core temperature sensor is hot. There is a risk of burns. Be careful when you remove the tip and the plug of the core temperature sensor.

9.2 Inserting the oven accessories

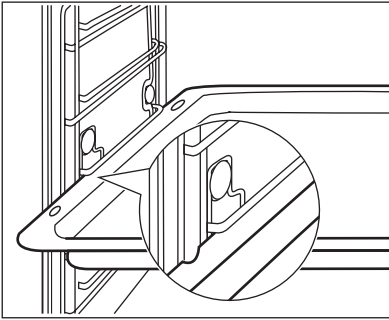


The deep pan and the wire shelf have side edges. These edges and the shape of the guide-bars are a special device to prevent the cookware from slipping.

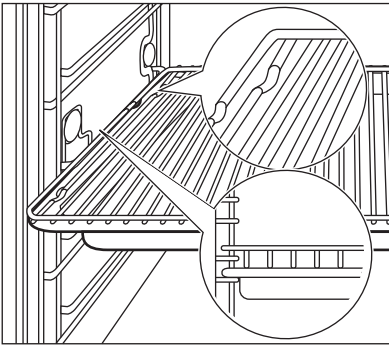


Installing the wire shelf and the deep pan together

Put the wire shelf on the deep pan. Push the deep pan between the guide-bars of one of the oven levels.

9.3 Telescopic runners - inserting the oven accessories

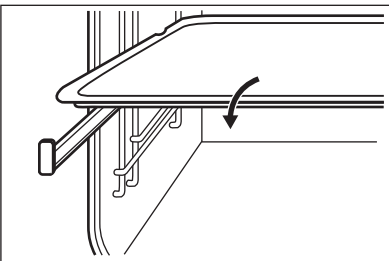

Put the baking tray or deep pan on the telescopic runners.

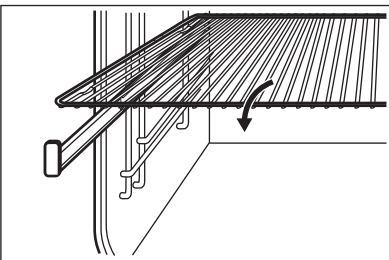


Put the wire shelf on the telescopic runners so that the feet point downwards.



The high rim around the wire shelf is a special device to prevent the cookware from slipping.

9.4 Inserting the wire shelf and the deep pan together

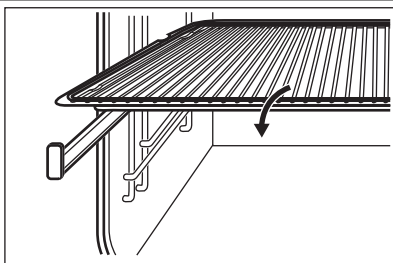


Put the wire shelf on the deep pan. Put the wire shelf and the deep pan on the telescopic runners.

9.5 Trivet and Grill- / Roasting pan




WARNING!

Be careful when you remove the accessories from a hot appliance. There is a risk of burns.

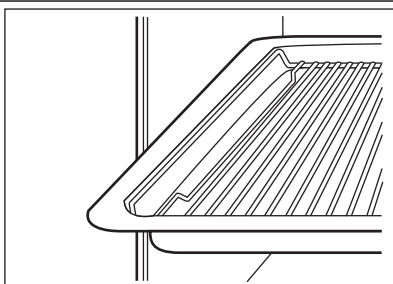

You can use the trivet to roast larger pieces of meat or poultry on one shelf position:

- Put the trivet into the deep pan so that the supports of the wire shelf point up.
- Put the deep pan into the oven on the necessary shelf position.

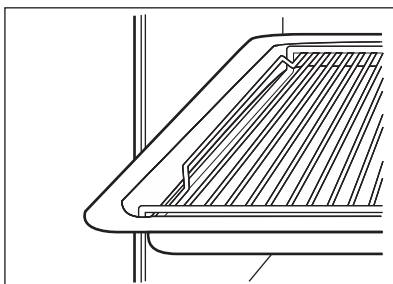

You can use the trivet to grill flat dishes in large quantities and to toast:

- Put the trivet into the deep pan so that the supports of the wire shelf point down.
- Put the deep pan into the oven on the necessary shelf position.

10. ADDITIONAL FUNCTIONS






10.1 Favourite Programme menu

You can save your favourite settings, like duration, temperature or heating function.

They are available in the Favourite Programme menu. You can save 20 programmes.



Saving a programme

1. Activate the appliance.

2. Set a heating function or an Assisted Cooking function.
3. Touch  again and again until the display shows "SAVE ". Press **OK** to confirm.
4. The display shows the first free memory position. Press **OK** to confirm.
5. Enter the name of the programme. The first letter flashes. Touch  or  to change the letter. Press **OK**.
6. Touch  or  to move the cursor to the right or to the left. Press **OK**. The next letter flashes. Do steps 5 and 6 again as necessary.
7. Press and hold **OK** to save.



Useful information:

- You can overwrite a memory position. When the display shows the first free memory position, touch  or  and press **OK** to overwrite an existing programme.
- You can change the name of a programme in the menu Edit Programme Name .


Activating the programme

1. Activate the appliance.
2. Select the Favourite Programme menu. Press **OK** to confirm.
3. Select your favourite programme name. Press **OK** to confirm.

10.2 Function Lock

The Function Lock prevents an accidental change of the heating function. You can activate the Function Lock only when the appliance operates.

Activating the Function Lock :

1. Activate the appliance.
2. Set a heating function or setting.
3. Press  again and again until the display shows Function Lock .
4. Press **OK** to confirm.

Deactivating the Function Lock :



1. Press .

2. Press **OK** to confirm.

10.3 Child Lock

The Child Lock prevents an accidental operation of the appliance.



Activating and deactivating the Child Lock function:

1. Activate the appliance.
2. Touch  and  at the same time until the display shows a message.

10.4 SET + GO

The SET + GO function lets you set a heating function (or programme) and use it later with one press of the sensor field.

Activating the function:

1. Activate the appliance.
2. Set a heating function.
3. Press  again and again until the display shows Duration .
4. Set the time.
5. Press  again and again until the display shows SET + GO .
6. Press **OK** to confirm.

To start SET + GO , press a sensor field (except for ①). The set heating function starts.

When the heating function ends, an acoustic signal sounds.



Useful information:

- When the heating function operates, the function Function Lock is on.
- You can activate and deactivate the SET + GO function in the Basic Settings menu.

10.5 Automatic switch-off

For safety reasons the appliance deactivates after some time:

- If a heating function operates.
- If you do not change the oven temperature.

Temperature	Switch-off time
30 °C - 115 °C	12.5 h

Temperature	Switch-off time
120 °C - 195 °C	8.5 h
200 °C - 230 °C	5.5 h



The automatic switch-off works with all functions, except Light , Duration , End Time and Core Temperature Sensor.

surfaces of the appliance cool. If you deactivate the appliance, the cooling fan can continue to operate until the appliance cools down.

10.6 Cooling fan

When the appliance operates, the cooling fan activates automatically to keep the

11. HELPFUL HINTS AND TIPS

11.1 Inner side of the door

In some models, on the inner side of the door you can find:

- The numbers of the shelf positions.
- Information about the heating functions, recommended shelf positions and temperatures for typical dishes.



The temperature and baking times in the tables are guidelines only. They depend on the recipes and the quality and quantity of the ingredients used.

11.2 Advice for special heating functions of the oven

Keep Warm

Use this function if you want to keep food warm.
The temperature regulates itself automatically to 80 °C.

Plate Warming

For warming plates and dishes.
Distribute plates and dishes evenly on the oven shelf. Move stacks around after half of the warming time (swap top and bottom).
The automatic temperature is 70 °C.
Recommended shelf position: 3.

Dough Proving

You can use this automatic function with any recipe for yeast dough you like. It

gives you a good atmosphere for rising. Put the dough into a dish that is big enough for rising and cover it with a wet towel or plastic foil. Insert a wire shelf on level one and put the dish in. Close the door and set the function dough proving. Set the necessary time.

11.3 Cooking with steam

Cookware for steam cooking

- Use only heat and corrosion resistant cookware or chrome steel food containers (for some models only).

Shelf positions

- The correct shelf positions are in the table below. Count the shelf positions from the bottom to the top.

General notes

- When you cook longer than 30 minutes or when you cook large quantities of food, add water if it is necessary.
- Put the food into the correct cooking containers and put the containers on the shelves. Make sure that there is some distance between the shelves to let the steam circulate around each container.
- After each use, remove the water from the water drawer, connecting hoses and steam generator. Refer to the chapter "Care and cleaning".

Notes on the tables for steam cooking

- The tables give data for typical dishes.

- The temperature and time are for guidance only and depend on the type, dimensions and quantity of the food and cookware.
- Use a recipe that is almost the same if you cannot find the settings for your recipe.
- Start the procedure with a cold appliance unless the data in the tables is different.
- When you cook rice, use a ratio of 1.5:1 – 2:1 water to rice because rice absorbs water.

11.4 Steam water table

Water in the water drawer (ml)	Time ¹⁾ (min.)
400	15 - 25
600	25 - 40
800	40 - 50

¹⁾ The times are for guidance only.

11.5 Full Steam / Eco Steam



WARNING!

Do not open the appliance door when the function is activated. There is a risk of burns.

The function is applicable for all types of food, fresh or frozen. You can use it to cook, warm, defrost, poach or blanch vegetables, meat, fish, pasta, rice, sweet corn, semolina and eggs.

Cooking menus: You can prepare a full meal in one operation. To correctly cook each dish, use those with cooking times which are almost the same. Add the largest quantity of water necessary for one of

the dishes in the operation. Put the dishes into the correct cookware and then on the oven shelves. Adjust the distance between the cookware to let the steam circulate.

Sterilisation

- With this function you can sterilise containers (e.g. baby bottles).
- Put the clean containers in the middle of the shelf on the 1st shelf position. Make sure that the opening is down at a small angle.
- Fill the drawer with the maximum quantity of water and set the time to 40 min.

Vegetables

Food	Shelf position	Temperature (°C)	Water in the water drawer (ml)	Time ¹⁾ (min.)
Artichokes	2	96	800	50 - 60
Auberginen	2	96	450	15 - 25
Cauliflower, whole	2	96	600	35 - 45
Cauliflower, florets	2	96	500	25 - 30
Broccoli, whole	2	96	550	30 - 40
Broccoli, florets	2	96	400	20 - 25
Mushroom slices	2	96	400	15 - 20

Food	Shelf position	Temperature (°C)	Water in the water drawer (ml)	Time ¹⁾ (min.)
Peas	2	96	450	20 - 25
Fennel	2	96	600	35 - 45
Carrots	2	96	600	35 - 45
Kohlrabi, strips	2	96	550	30 - 40
Peppers, strips	2	96	400	20 - 25
Leeks, rings	2	96	500	25 - 35
Green beans	2	96	550	35 - 45
Lamb's lettuce, florets	2	96	450	20 - 25
Brussels sprouts	2	96	550	30 - 40
Beetroot	2	96	800 + 400	70 - 90
Black salsify	2	96	600	35 - 45
Celery, cubed	2	96	500	25 - 35
Asparagus, green	2	96	500	25 - 35
Asparagus, white	2	96	600	35 - 45
Spinach	2	96	350	15
Peeling tomatoes	2	96	350	15
White haricot beans	2	96	500	30 - 40
Savoy cabbage	2	96	400	20 - 25
Courgette, slices	2	96	350	15 - 20

¹⁾ The times are for guidance only.

Side dishes / accompaniments

Food	Shelf position	Temperature (°C)	Water in the water drawer (ml)	Time ¹⁾ (min.)
Yeast dumplings	2	96	600	30 - 40
Potato dumplings	2	96	600	35 - 45

Food	Shelf position	Temperature (°C)	Water in the water drawer (ml)	Time ¹⁾ (min.)
Unpeeled potatoes, medium	2	96	750	45 - 55
Rice (water / rice ratio 1.5:1)	2	96	600	35 - 40
Boiled potatoes, quartered	2	96	600	35 - 40
Bread dumpling	2	96	600	35 - 45
Tagliatelle, fresh	2	96	450	20 - 25
Polenta (liquid ratio 3:1)	2	96	750	45 - 50

¹⁾ The times are for guidance only.

Fish

Food	Shelf position	Temperature (°C)	Water in the water drawer (ml)	Time ¹⁾ (min.)
Trout, approx. 250 g	2	85	550	30 - 40
Prawns, fresh	2	85	450	20 - 25
Prawns, frozen	2	85	550	30 - 40
Salmon fillets	2	85	500	25 - 35
Salmon trout, approx. 1000 g	2	85	600	40 - 45
Mussels	2	96	500	20 - 30
Flat fish fillet	2	80	350	15

¹⁾ The times are for guidance only.

Meat

Food	Shelf position	Temperature (°C)	Water in the water drawer (ml)	Time ¹⁾ (min.)
Cooked ham 1000 g	2	96	800 + 150	55 - 65
Chicken breast, poached	2	90	500	25 - 35

Food	Shelf position	Temperature (°C)	Water in the water drawer (ml)	Time 1) (min.)
Chicken, poached, 1000 - 1200 g	2	96	800 + 150	60 - 70
Veal / pork loin without leg, 800 - 1000 g	2	90	800 + 300	80 - 90
Kasseler (smoked loin of pork), poached	2	90	800 + 300	90 - 110
Tafelspitz (prime boiled beef)	2	96	800 + 700	110 - 120
Chipolatas	2	80	400	15 - 20

1) The times are for guidance only.

Eggs

Food	Shelf position	Temperature (°C)	Water in the water drawer (ml)	Time 1) (min.)
Eggs, hard-boiled	2	96	500	18 - 21
Eggs, medium-boiled	2	96	450	13 - 16
Eggs, soft-boiled	2	96	400	11 - 12

1) The times are for guidance only.

11.6 Turbo Grilling and Full Steam in succession

When you combine functions, you can cook meat, vegetables and accompaniments one after the other. All dishes are ready to serve at the same time.

- Use the turbo grilling function to initially roast the food.
- Put the prepared vegetables and accompaniments into cookware correct

for an oven procedure and then into the oven with the roast.

- Let the oven temperature decrease to around 80 °C . To decrease the temperature quicker, open the oven door to the first position for approximately 15 minutes.
- Start the Full Steam function and cook all dishes together until ready.
- The maximum water quantity is 800 ml.

Food	Turbo Grilling (first step: cook meat)			Full Steam (second step: add vegetables)		
	Temperature (°C)	Time (min.)	Shelf position	Temperature (°C)	Time (min.)	Shelf position
Roast beef 1 kg Brussels sprouts, polenta	180	60 – 70	meat: 1	96	40 – 50	meat: 1 vegetables: 3
Roast pork 1 kg, Potatoes, vegetables, gravy	180	60 – 70	meat: 1	96	30 – 40	meat: 1 vegetables: 3
Roast veal 1 kg, Rice, vegetables	180	50 – 60	meat: 1	96	30 – 40	meat: 1 vegetables: 3

11.7 Half Steam + Heat

Type of Food	Half Steam + Heat (Water amount: about 300 ml)		
	Shelf position	Temperature (°C)	Time (min.)
Custard / flan in individual dishes ¹⁾	2	90	40 - 45
Baked eggs ¹⁾	2	90	35 - 45
Terrine ¹⁾	2	90	40 - 50
Thin fish fillet	2	85	15 - 25
Thick fish fillet	2	90	25 - 35
Small fish up to 350 g	2	90	25 - 35
Whole fish up to 1000 g	2	90	35 - 45

¹⁾ continue for a further half an hour with the door closed.

Reheating

Type of Food	Half Steam + Heat (Water amount: about 300 ml)		
	Shelf position	Temperature (°C)	Time (min.)
Dumplings	2	85	25 - 35
Pasta	2	85	20 - 25
Rice	2	85	20 - 25
One-plate dishes	2	85	20 - 25

11.8 Quarter Steam + Heat

Type of Food	Quarter Steam + Heat ¹⁾		
	Shelf position	Temperature (°C)	Time (min.)
Roast pork 1000 g	2	160 - 180	90 - 100
Roast beef 1000 g	2	180 - 200	60 - 90
Roast veal 1000 g	2	180	80 - 90
Meat loaf, uncooked, 500 g	2	180	30 - 40
Smoked loin of pork 600 - 1000 g (soak for 2 hours)	2	160 - 180	60 - 70
Chicken 1000 g	2	180 - 200	50 - 60
Duck 1500 - 2000 g	2	180	70 - 90
Goose 3000 g	1	170	130 - 170
Potato gratin	2	160 - 170	50 - 60
Pasta bake	2	190	40 - 50
Lasagne	2	180	45 - 55
Misc. types of bread 500 - 1000 g	2	180 - 190	50 - 60
Rolls 40 - 60 g	2	180 - 210	30 - 40
Ready-to-bake rolls	2	200	10 - 20
Ready-to-bake baguettes 40 - 50 g	2	200	20 - 30
Ready-to-bake baguettes 40 - 50 g, frozen	2	200	25 - 35

¹⁾ Amount of water to be added will depend on the length of the cooking time.

11.9 Baking

General instructions

- Your new oven can bake or roast differently to the appliance you had before. Adapt your usual settings (temperature, cooking times) and shelf positions to the values in the tables.
- With longer baking times, you can deactivate the oven approximately 10 minutes before the end of the baking time and then use the residual heat.

When you cook frozen food, the trays in the oven can twist during baking. When the trays become cold again, the distortions are gone.

How to use the Baking Tables

- The manufacturer recommends that you use the lower temperature the first time.
- If you cannot find the settings for a special recipe, look for the one that is almost the same.
- You can extend baking times by 10 – 15 minutes if you bake cakes on more than one level.
- Cakes and pastries at different heights do not always brown equally at first. If this occurs, do not change the temperature setting. The differences equalize during the baking procedure.

11.10 Tips on baking

Baking results	Possible cause	Remedy
The bottom of the cake is not browned sufficiently.	The shelf position is incorrect.	Put the cake on a lower shelf.
The cake sinks and becomes soggy, lumpy or streaky.	The oven temperature is too high.	The next time you bake, set a slightly lower oven temperature.
The cake sinks and becomes soggy, lumpy or streaky.	The baking time is too short.	Set a longer baking time. You cannot decrease baking times by setting higher temperatures.
The cake sinks and becomes soggy, lumpy or streaky.	There is too much liquid in the mixture.	Use less liquid. Be careful with mixing times, especially if you use a mixing machine.
The cake is too dry.	The oven temperature is too low.	The next time you bake, set a higher oven temperature.
The cake is too dry.	The baking time is too long.	The next time you bake, set a shorter baking time.
The cake browns unevenly.	The oven temperature is too high and the baking time is too short.	Set a lower oven temperature and a longer baking time.
The cake browns unevenly.	The mixture is unevenly distributed.	Spread the mixture evenly on the baking tray.
The cake is not ready in the baking time given.	The oven temperature is too low.	The next time you bake, set a slightly higher oven temperature.

11.11 Baking on one level:

Baking in tins

Type of baking	Oven function	Shelf position	Temperature (°C)	Time (min)
Ring cake / Brioche	True Fan Cooking	1	150 - 160	50 - 70
Madeira cake / Fruit cakes	True Fan Cooking	1	140 - 160	70 - 90
Fatless sponge cake / Fatless sponge cake	True Fan Cooking	2	140 - 150	35 - 50

Type of bak- ing	Oven func- tion	Shelf posi- tion	Temperature (°C)	Time (min)
Fatless sponge cake / Fatless sponge cake	Conventional Cooking	2	160	35 - 50
Flan base - short pastry	True Fan Cooking	2	170 - 180 1)	10 - 25
Flan base - sponge mix- ture	True Fan Cooking	2	150 - 170	20 - 25
Apple pie / Apple pie (2 tins Ø20 cm, diagonally off set)	True Fan Cooking	2	160	60 - 90
Apple pie / Apple pie (2 tins Ø20 cm, diagonally off set)	Conventional Cooking	1	180	70 - 90
Cheesecake	Conventional Cooking	1	170 - 190	60 - 90

1) Preheat the oven.

Cakes / pastries / breads on baking trays

Type of bak- ing	Oven func- tion	Shelf posi- tion	Temperature (°C)	Time (min)
Plaited bread / Bread crown	Conventional Cooking	3	170 - 190	30 - 40
Christmas stollen	Conventional Cooking	2	160 - 180 1)	50 - 70
Bread (rye bread):				
1. First part of baking proce- dure.	Conventional Cooking	1	1. 230 1)	1. 20
2. Second part of baking proce- dure.			2. 160 - 180	2. 30 - 60
Cream puffs / Eclairs	Conventional Cooking	3	190 - 210 1)	20 - 35
Swiss roll	Conventional Cooking	3	180 - 200 1)	10 - 20

Type of bak- ing	Oven func- tion	Shelf posi- tion	Temperature (°C)	Time (min)
Cake with crumble top- ping (dry)	True Fan Cooking	3	150 - 160	20 - 40
Buttered al- mond cake / Sugar cakes	Conventional Cooking	3	190 - 210 1)	20 - 30
Fruit flans (made with yeast dough / sponge mix- ture) 2)	True Fan Cooking	3	150	35 - 55
Fruit flans (made with yeast dough / sponge mix- ture) 2)	Conventional Cooking	3	170	35 - 55
Fruit flans made with short pastry	True Fan Cooking	3	160 - 170	40 - 80
Yeast cakes with delicate toppings (e.g. quark, cream, custard)	Conventional Cooking	3	160 - 180 1)	40 - 80

1) Preheat the oven.

2) Use deep pan.

Biscuits

Type of bak- ing	Oven func- tion	Shelf posi- tion	Temperature (°C)	Time (min)
Short pastry biscuits	True Fan Cooking	3	150 - 160	10 - 20
Short bread / Short bread / Pastry stripes	True Fan Cooking	3	140	20 - 35
Short bread / Short bread / Pastry stripes	Conventional Cooking	3	160 1)	20 - 30
Biscuits made with sponge mixture	True Fan Cooking	3	150 - 160	15 - 20

Type of baking	Oven function	Shelf position	Temperature (°C)	Time (min)
Pastries made with egg white / Merungues	True Fan Cooking	3	80 - 100	120 - 150
Macaroons	True Fan Cooking	3	100 - 120	30 - 50
Biscuits made with yeast dough	True Fan Cooking	3	150 - 160	20 - 40
Puff pastries	True Fan Cooking	3	170 - 180 ¹⁾	20 - 30
Rolls	True Fan Cooking	3	160 ¹⁾	10 - 25
Rolls	Conventional Cooking	3	190 - 210 ¹⁾	10 - 25
Small cakes / Small cakes (20 per tray)	True Fan Cooking	3	150 ¹⁾	20 - 35
Small cakes / Small cakes (20 per tray)	Conventional Cooking	3	170 ¹⁾	20 - 30

¹⁾ Preheat the oven.

Bakes and gratins

Dish	Oven function	Shelf position	Temperature (°C)	Time (min)
Pasta bake	Conventional Cooking	1	180 - 200	45 - 60
Lasagne	Conventional Cooking	1	180 - 200	25 - 40
Vegetables au gratin ¹⁾	Turbo Grilling or True Fan Cooking	1	160 - 170	15 - 30
Baguettes topped with melted cheese	Turbo Grilling or True Fan Cooking	1	160 - 170	15 - 30
Sweet bakes	Conventional Cooking	1	180 - 200	40 - 60
Fish bakes	Conventional Cooking	1	180 - 200	30 - 60
Stuffed vegetables	Turbo Grilling or True Fan Cooking	1	160 - 170	30 - 60

1) Preheat the oven.

Moist Fan Baking

Type of food	Shelf position	Temperature (°C)	Time (min.)
Pasta bake	2	180 - 200	45 - 60
Lasagne	2	180 - 200	45 - 60
Potato gratin	2	190 - 210	55 - 80
Sweet dishes	2	180 - 200	45 - 60
Ring cake or brioche	1	160 - 170	50 - 70
Plaited bread / bread crown	2	170 - 190	40 - 50
Cake with crumble topping (dry)	3	160 - 170	20 - 40
Biscuits made with yeast dough	2	160 - 170	20 - 40

11.12 Multileveled Baking

Cakes / pastries / breads on baking trays

Type of bak- ing	True Fan Cooking		Temperature (°C)	Time (min)
	Shelf position			
	2 shelf posi- tions	3 shelf posi- tions		
Cream puffs / Eclairs	1 / 4	-	160 - 180 1)	25 - 45
Dry streusel cake	1 / 4	-	150 - 160	30 - 45

1) Preheat the oven.

Biscuits / small cakes / small cakes / pastries / rolls

Type of bak- ing	True Fan Cooking		Temperature (°C)	Time (min)
	Shelf position			
	2 shelf posi- tions	3 shelf posi- tions		
Short pastry biscuits	1 / 4	1 / 3 / 5	150 - 160	20 - 40
Short bread / Short bread / Pastry Stripes	1 / 4	1 / 3 / 5	140	25 - 50
Biscuits made with sponge mixture	1 / 4	-	160 - 170	25 - 40

Type of bak- ing	True Fan Cooking		Temperature (°C)	Time (min)
	Shelf position			
	2 shelf posi- tions	3 shelf posi- tions		
Biscuits made with egg white / Merin- gues	1 / 4	-	80 - 100	130 - 170
Macaroons	1 / 4	-	100 - 120	40 - 80
Biscuits made with yeast dough	1 / 4	-	160 - 170	30 - 60
Puff pastries	1 / 4	-	170 - 180 ¹⁾	30 - 50
Rolls	1 / 4	-	180	30 - 55
Small cakes / Small cakes (20 per tray)	1 / 4	-	150 ¹⁾	25 - 40

¹⁾ Preheat the oven.

11.13 Slow Cook

Use this function to prepare lean, tender pieces of meat and fish with core temperatures no more than 65 °C. Slow Cook is not applicable to such recipes as pot roast or fatty roast pork. You can use the Core Temperature Sensor to guarantee that the meat has the correct core temperature (see table for the Core Temperature Sensor).
In the first 10 minutes you can set an oven temperature between 80 °C and 150 °C. The default is 90 °C. After the temperature is set, the oven continues to cook at 80 °C. Do not use the automatic slow cook function for poultry.



When you use this function, always cook dishes without a cover.

1. Sear the meat in a pan on the hob on a very high setting for 1 - 2 minutes on each side.
2. Put the meat together with the hot roasting pan into the oven on the wire shelf.
3. Put the Core Temperature Sensor into the meat.
4. Select the Slow cook function and set the correct end core temperature.

Food to be cooked	Weight (g)	Shelf posi- tion	Temperature °C	Time in min.
Roast beef	1000 - 1500	1	120	120 - 150
Fillet of beef	1000 - 1500	3	120	90 - 150
Roast veal	1000 - 1500	1	120	120 - 150
Steaks	200 - 300	3	120	20 - 40

11.14 Pizza Setting

Type of baking	Shelf position	Temperature (°C)	Time (min)
Pizza (thin crust)	2	200 - 230 ¹⁾²⁾	15 - 20

Type of baking	Shelf position	Temperature (°C)	Time (min)
Pizza (with a lot of topping)	2	180 - 200	20 - 30
Tarts	1	180 - 200	40 - 55
Spinach flan	1	160 - 180	45 - 60
Quiche Lorraine	1	170 - 190	45 - 55
Swiss Flan	1	170 - 190	45 - 55
Apple cake, covered	1	150 - 170	50 - 60
Vegetable pie	1	160 - 180	50 - 60
Unleavened bread	2	230 ¹⁾	10 - 20
Puff pastry flan	2	160 - 180 ¹⁾	45 - 55
Flammekuchen (Pizza-like dish from Alsace)	2	230 ¹⁾	12 - 20
Piroggen (Russian version of calzone)	2	180 - 200 ¹⁾	15 - 25

1) Preheat the oven.

2) Use a deep pan.

11.15 Roasting

- Use heat-resistant ovenware to roast (refer to the instructions of the manufacturer).
- You can roast large roasting joints directly in the deep pan (if present) or on the wire shelf above the deep pan.
- Roast lean meats in the roasting tin with the lid. This keeps the meat more succulent.
- All types of meat that can be browned or have crackling can be roasted in the roasting tin without the lid.
- We recommend that you cook meat and fish weighing 1 kg and above in the oven.
- To prevent the meat juices or fat from burning onto the pan, put some liquid into the deep pan.
- If necessary, turn the roast (after 1 / 2 - 2 / 3 of the cooking time).
- Baste large roasts and poultry with their juices several times during roasting. This gives better roasting results.
- You can deactivate the appliance approximately 10 minutes before the end of the roasting time, and use the residual heat.

11.16 Roasting with Turbo Grilling

Beef

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time (min.)
Pot roast	1 - 1.5 kg	Conventional Cooking	1	230	120 - 150

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time (min.)
Roast beef or fillet: rare	per cm of thickness	Turbo Grilling	1	190 - 200 1)	5 - 6
Roast beef or fillet: medium	per cm of thickness	Turbo Grilling	1	180 - 190 1)	6 - 8
Roast beef or fillet: well done	per cm of thickness	Turbo Grilling	1	170 - 180 1)	8 - 10

1) Preheat the oven.

Pork

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time (min.)
Shoulder / Neck / Ham joint	1 - 1.5 kg	Turbo Grilling	1	160 - 180	90 - 120
Chop / Spare rib	1 - 1.5 kg	Turbo Grilling	1	170 - 180	60 - 90
Meatloaf	750 g - 1 kg	Turbo Grilling	1	160 - 170	50 - 60
Pork knuckle (precooked)	750 g - 1 kg	Turbo Grilling	1	150 - 170	90 - 120

Veal

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time (min.)
Roast veal	1 kg	Turbo Grilling	1	160 - 180	90 - 120
Knuckle of veal	1.5 - 2 kg	Turbo Grilling	1	160 - 180	120 - 150

Lamb

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time (min.)
Leg of lamb / Roast lamb	1 - 1.5 kg	Turbo Grilling	1	150 - 170	100 - 120
Saddle of lamb	1 - 1.5 kg	Turbo Grilling	1	160 - 180	40 - 60

Game

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time (min.)
Saddle / Leg of hare	up to 1 kg	Conventional Cooking	1	230 ¹⁾	30 - 40
Saddle of venison	1.5 - 2 kg	Conventional Cooking	1	210 - 220	35 - 40
Haunch of venison	1.5 - 2 kg	Conventional Cooking	1	180 - 200	60 - 90

¹⁾ Preheat the oven.

Poultry

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time (min.)
Poultry portions	200 - 250 g each	Turbo Grilling	1	200 - 220	30 - 50
Half chicken	400 - 500 g each	Turbo Grilling	1	190 - 210	35 - 50
Chicken, poulard	1 - 1.5 kg	Turbo Grilling	1	190 - 210	50 - 70
Duck	1.5 - 2 kg	Turbo Grilling	1	180 - 200	80 - 100
Goose	3.5 - 5 kg	Turbo Grilling	1	160 - 180	120 - 180
Turkey	2.5 - 3.5 kg	Turbo Grilling	1	160 - 180	120 - 150
Turkey	4 - 6 kg	Turbo Grilling	1	140 - 160	150 - 240

Fish (steamed)

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time (min.)
Whole fish	1 - 1.5 kg	Conventional Cooking	1	210 - 220	40 - 60

11.17 Grilling

Always grill with the maximum temperature setting.
Set the shelf into the shelf position as recommended in the grilling table.
Always set the pan to collect the fat into the first shelf position.

Grill only flat pieces of meat or fish.
Always preheat the empty oven with the grill functions for 5 minutes.

**CAUTION!**

Always grill with the oven door closed.

Grilling

Food to be grilled	Shelf position	Temperature	Time (min.)	
			1st side	2nd side
Roast beef	2	210 - 230	30 - 40	30 - 40
Filet of beef	3	230	20 - 30	20 - 30
Back of pork	2	210 - 230	30 - 40	30 - 40
Back of veal	2	210 - 230	30 - 40	30 - 40
Back of lamb	3	210 - 230	25 - 35	20 - 25
Whole Fish, 500 - 1000 g	3 / 4	210 - 230	15 - 30	15 - 30

Fast Grilling

Food to be gril- led	Shelf position	Time (min.)	
		1st side	2nd side
Burgers / Burgers	4	8 - 10	6 - 8
Pork fillet	4	10 - 12	6 - 10
Sausages	4	10 - 12	6 - 8
Fillet / Veal steaks	4	7 - 10	6 - 8
Toast / Toast ¹⁾	5	1 - 3	1 - 3
Toast with topping	4	6 - 8	-

1) Preheat the oven.

11.18 Convenience food

True Fan Cooking

Convenience food	Shelf position	Temperature (°C)	Time (min.)
Pizza, frozen	2	200 - 220	15 - 25
Pizza American, frozen	2	190 - 210	20 - 25
Pizza, chilled	2	210 - 230	13 - 25
Pizza Snacks, frozen	2	180 - 200	15 - 30
French Fries, thin	3	200 - 220	20 - 30
French Fries, thick	3	200 - 220	25 - 35
Wedges / Croquettes	3	220 - 230	20 - 35
Hash Browns	3	210 - 230	20 - 30

Convenience food	Shelf position	Temperature (°C)	Time (min.)
Lasagne / Canneloni, fresh	2	170 - 190	35 - 45
Lasagne / Canneloni, frozen	2	160 - 180	40 - 60
Oven baked cheese	3	170 - 190	20 - 30
Chicken Wings	2	190 - 210	20 - 30

Frozen Ready Meals

Food to be cooked	Oven functions	Shelf position	Temperature (°C)	Time (min.)
Frozen pizza	Conventional Cooking	3	as per manufacturer's instructions	as per manufacturer's instructions
French fries ¹⁾ (300 - 600 g)	Conventional Cooking or Turbo Grilling	3	200 - 220	as per manufacturer's instructions
Baguettes	Conventional Cooking	3	as per manufacturer's instructions	as per manufacturer's instructions
Fruit flans	Conventional Cooking	3	as per manufacturer's instructions	as per manufacturer's instructions

¹⁾ Turn the French fries 2 or 3 times during cooking

11.19 Defrosting

Remove the food packaging, and then put the food on a plate.

Do not cover it with a bowl or a plate, as this can extend the defrost time.
Use the first oven shelf position from the bottom.

Dish	Defrosting time (min.)	Further defrosting time (min.)	Comment
Chicken, 1000 g	100 - 140	20 - 30	Put the chicken on an upturned saucer placed on a large plate. Turn halfway through.
Meat, 1000 g	100 - 140	20 - 30	Turn halfway through.
Meat, 500 g	90 - 120	20 - 30	Turn halfway through.
Trout, 150 g	25 - 35	10 - 15	-
Strawberries, 300 g	30 - 40	10 - 20	-
Butter, 250 g	30 - 40	10 - 15	-
Cream, 2 x 200 g	80 - 100	10 - 15	Cream can also be whipped when still slightly frozen in places.

Dish	Defrosting time (min.)	Further defrosting time (min.)	Comment
Gateau, 1400 g	60	60	-

11.20 Preserving

Things to note:

- Use only preserve jars of the same dimensions available on the market.
- Do not use jars with twist-off and bayonet type lids or metal tins.
- Use the first shelf from the bottom for this function.
- Put no more than six one-litre preserve jars on the baking tray.
- Fill the jars equally and close with a clamp.
- The jars cannot touch each other.
- Put approximately 1/2 litre of water into the baking tray to give sufficient moisture in the oven.
- When the liquid in the jars starts to simmer (after approximately 35 - 60 minutes with one-litre jars), stop the oven or decrease the temperature to 100 °C (see the table).

Soft fruit

Preserve	Temperature in °C	Cooking time until simmering (min.)	Continue to cook at 100°C (min.)
Strawberries / Blueberries / Raspberries / Ripe gooseberries	160 - 170	35 - 45	-

Stone fruit

Preserve	Temperature in °C	Cooking time until simmering (min.)	Continue to cook at 100°C (min.)
Pears / Quinces / Plums	160 - 170	35 - 45	10 - 15

Vegetables

Preserve	Temperature in °C	Cooking time until simmering (min.)	Continue to cook at 100°C (min.)
Carrots ¹⁾	160 - 170	50 - 60	5 - 10
Cucumbers	160 - 170	50 - 60	-
Mixed pickles	160 - 170	50 - 60	5 - 10
Kohlrabi / Peas / Asparagus	160 - 170	50 - 60	15 - 20

¹⁾ Leave standing in the oven after it's deactivated.

11.21 Drying

Use baking parchment as a cover for the oven shelves.

For best results, deactivate the appliance halfway through the operation. Open the

appliance door and let the appliance cool down. After that, complete the drying process.

Vegetables

Food to be dried	Shelf position		Temperature (°C)	Time (h)
	1 level	2 levels		
Beans	3	1 / 4	60 - 70	6 - 8
Peppers	3	1 / 4	60 - 70	5 - 6
Vegetables for sour	3	1 / 4	60 - 70	5 - 6
Mushrooms	3	1 / 4	50 - 60	6 - 8
Herbs	3	1 / 4	40 - 50	2 - 3

Fruit

Food to be dried	Shelf position		Temperature (°C)	Time (h)
	1 level	2 levels		
Plums	3	1 / 4	60 - 70	8 - 10
Apricots	3	1 / 4	60 - 70	8 - 10
Apple slices	3	1 / 4	60 - 70	6 - 8
Pears	3	1 / 4	60 - 70	6 - 9

11.22 Bread Baking

Type of baking	Oven function	Shelf position	Temperature °C	Time (min.)
White Bread	Bread	2	180 - 200	40 - 60
Baguette	Bread	2	200 - 220	35 - 45
Brioche	Bread	2	180 - 200	40 - 60
Ciabatta	Bread	2	200 - 220	35 - 45
Rye Bread	Bread	2	190 - 210	50 - 70
Dark Bread	Bread	2	180 - 200	50 - 70
All Grain bread	Bread	2	170 - 190	60 - 90

11.23 Core temperature sensor table

Beef

Food	Food Core Temperature °C
Rib / Fillet steak: rare	45 - 50
Rib / Fillet steak: medium	60 - 65
Rib / Fillet steak: well done	70 - 75

Pork

Food	Food Core Temperature °C
Shoulder / Ham / Neck joint of pork	80 - 82
Chop (saddle) / Smoked pork loin	75 - 80
Meatloaf	75 - 80

Veal

Food	Food Core Temperature °C
Roast veal	75 - 80
Knuckle of veal	85 - 90

Mutton / lamb

Food	Food Core Temperature °C
Leg of mutton	80 - 85
Saddle of mutton	80 - 85
Roast lamb / Leg of lamb	70 - 75

Game

Food	Food Core Temperature °C
Saddle of hare	70 - 75
Leg of hare	70 - 75
Whole hare	70 - 75
Saddle of venison	70 - 75
Leg of venison	70 - 75

Fish

Food	Food Core Temperature °C
Salmon	65 - 70
Trouts	65 - 70

12. CARE AND CLEANING



WARNING!
Refer to the Safety chapters.

Notes on cleaning:

- Clean the front of the appliance with a soft cloth with warm water and a cleaning agent.
- To clean metal surfaces, use a usual cleaning agent.

- Clean the appliance interior after each use. Then you can remove dirt more easily and it does not burn on.
- Clean stubborn dirt with a special oven cleaner.
- Clean all accessories after each use and let them dry. Use a soft cloth with warm water and a cleaning agent.

- If you have nonstick accessories, do not clean them using aggressive agents, sharp-edged objects or a dishwasher. It can cause damage to the nonstick coating.


12.1 Steam Cleaning

1. Remove the worst of the dirt manually.
2. Put 250 ml of water with 3 tablespoons of vinegar directly into the steam generator.
3. Activate the Steam Cleaning function in the main menu. The display shows the duration of the function.
4. An acoustic signal sounds when the programme is completed. Touch a sensor field to deactivate the signal.
5. Wipe out the appliance with a soft cloth. Remove the remaining water from the steam generator.
6. Keep the appliance door open for approximately 1 hour. Wait until the appliance is dry.

12.2 Shelf supports

You can remove the shelf supports to clean the side walls.

Removing the shelf supports

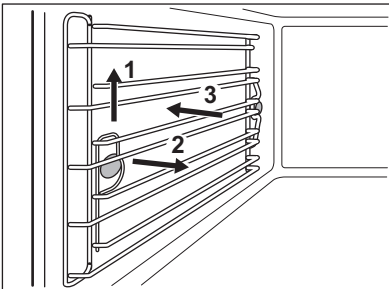

1. Carefully pull the supports up and out of the front catch.
2. Lightly move the supports on the front catch inwards.
3. Pull the supports out of the rear catch.

Installing the shelf supports

Install the shelf supports in the opposite sequence.

12.3 Steam generation system



CAUTION!

Dry the steam generator **after each use**. Remove the water with the sponge.



Remove the limescale with water and vinegar.



CAUTION!

Chemical de-scaling agents can cause damage to the enamel. Follow the instructions of the manufacturer.

Cleaning the water drawer and the steam generator:

1. Put the water and vinegar mixture (approximately 250 ml) **through the water drawer** into the steam generator. Wait for approximately 10 minutes.
2. Remove the water and vinegar with the sponge.
3. Put clean water (100 - 200 ml) into the water drawer to flush the steam generation system.
4. Remove the water from the steam generator with the sponge and rub it dry.
5. Keep the door open to let the appliance dry fully.

12.4 Lamp



WARNING!

There is a risk of electrical shock. The lamp and the lamp glass cover can be hot.

Before you change the lamp:

- Deactivate the appliance.
- Remove the fuses from the fuse box or deactivate the circuit breaker.



CAUTION!

Put a cloth on the bottom of the interior of the appliance. It prevents damage to the lamp glass cover and the cavity. Always use the same lamp type.

Replacing the lamp at the cavity ceiling:

1. Turn the lamp glass cover counter-clockwise to remove it.
2. Remove the metal ring and clean the glass cover.
3. Replace the lamp with a suitable 300 °C heat-resistant lamp.
4. Attach the metal ring to the glass cover.
5. Install the glass cover.
2. Use a Torx 20 screwdriver to remove the cover.
3. Remove and clean the metal frame and the seal.
4. Replace the lamp with a suitable 300 °C heat-resistant lamp.
5. Install the metal frame and the seal. Tighten the screws.
6. Install the left shelf support.

Replacing the lamp on the left side of the cavity:

1. Remove the left shelf support.

12.5 Cleaning the oven door


Removing the door and the glass panels

You can remove the oven door and the internal glass panels to clean it. The number of glass panels is different for different models.





WARNING!

Be careful when you remove the door from the appliance. The door is heavy.

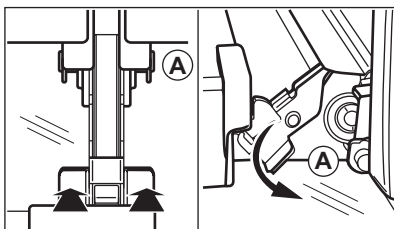

1. Open the door fully.
2. Fully press the clamping levers (A) on the two door hinges.
3. Close the oven door to the first opening position (approximately 70° angle).
4. Hold the door with one hand on each side and pull it away from the appliance at an up angle.
5. Put the door with the outer side down on a soft cloth on a stable surface. This is to prevent scratches.
6. Hold the door trim (B) on the top edge of the door at the two sides and push inwards to release the clip seal.
7. Pull the door trim to the front to remove it.

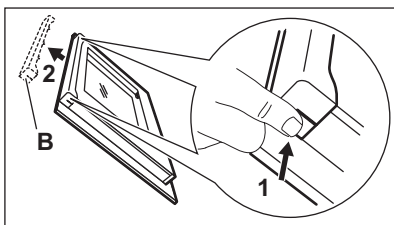

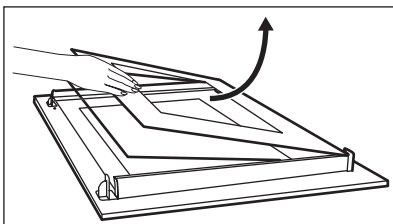

8. Hold the door glass panels on their top edge one by one and pull them up out of the guide.
9. Clean the glass panel with water and soap. Dry the glass panel carefully.

Installing the door and the glass panels

When the cleaning is completed, install the glass panels and the oven door. Do

the above steps in the opposite sequence. Install the smaller panel first, then the larger.

13. WHAT TO DO IF...



WARNING!

Refer to the Safety chapters.

Problem	Possible cause	Remedy
The appliance does not heat up.	The appliance is deactivated.	Activate the appliance.
The appliance does not heat up.	The clock is not set.	Set the clock.
The appliance does not heat up.	The necessary settings are not set.	Check the settings.
The appliance does not heat up.	The Child Lock is activated.	Refer to "Activating and deactivating the Child Lock function".
The appliance does not heat up.	The fuse is released.	Make sure that the fuse is the cause of the malfunction. If the fuse releases again and again, contact a qualified electrician.
The display shows F111.	The CT Sensor plug is not correctly installed into the socket.	Put the plug of core temperature sensor as far as possible into the socket.
The lamp does not operate.	The lamp is defective.	Replace the lamp.
The lamp does not operate.	You have selected an ECO function or Moist Fan Baking. In these functions the light cannot be activated.	The light cannot be activated because these functions help to save energy.

If you cannot find a solution to the problem yourself, contact your dealer or the service centre.

The necessary data for the service centre is on the rating plate. The rating plate is on the front frame of the appliance cavity.

We recommend that you write the data here:

Model (MOD.)
Product number (PNC)
Serial number (S.N.)

14. INSTALLATION



WARNING!
Refer to the Safety chapters.



The built-in unit must meet the stability requirements of DIN 68930.

The oven is designed to be connected to 230 - 240V ~ (50Hz) electricity supply. The oven has an easily accessible terminal block which is marked as follows:

Letter L - Live terminal
Letter N - Neutral terminal
⊕ - Earth terminal



CAUTION!
This oven must be earthed!

The cable used to connect the oven to the electrical supply must comply to the specifications given below.
For UK use only





Connection via	Min. size Cable/ flex	Cable/flex type	Fuse
Cooker Control Circuit	2,5 mm²	PVC / PVC twin and earth	min: 15 A max: 20 A





It is necessary that you install a double pole switch between the oven and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current regulations.
The switch must not break the yellow and green earth cable at any point.





After installation and connecting, the cable must be placed so that it cannot at any point reach a temperature of more than 50°C above the ambient temperature.
Before the oven is connected, check that the main fuse and the domestic installation can support the load; and that the power supply is properly earthed.

The manufacturer declines any responsibility should these safety measures not be carried out.

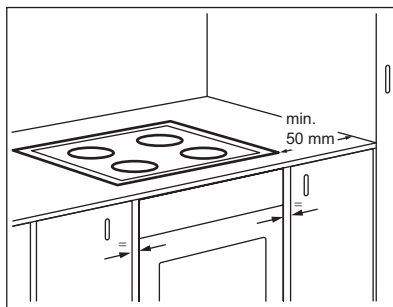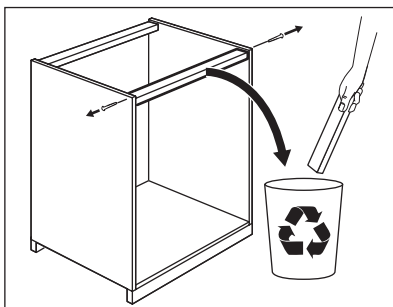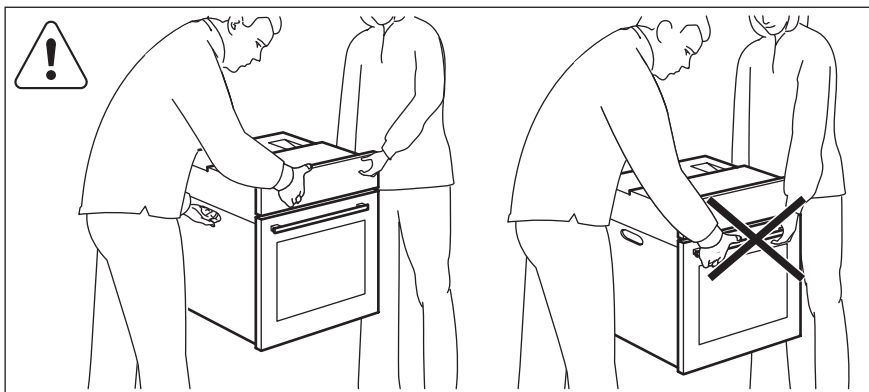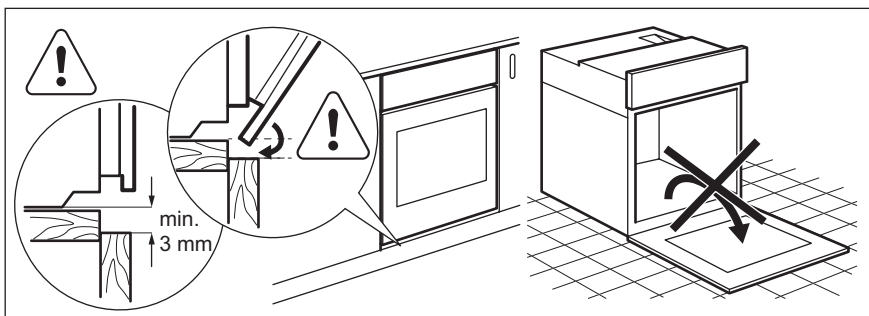

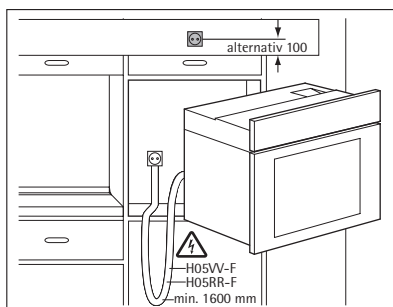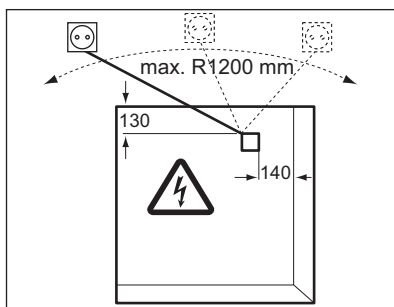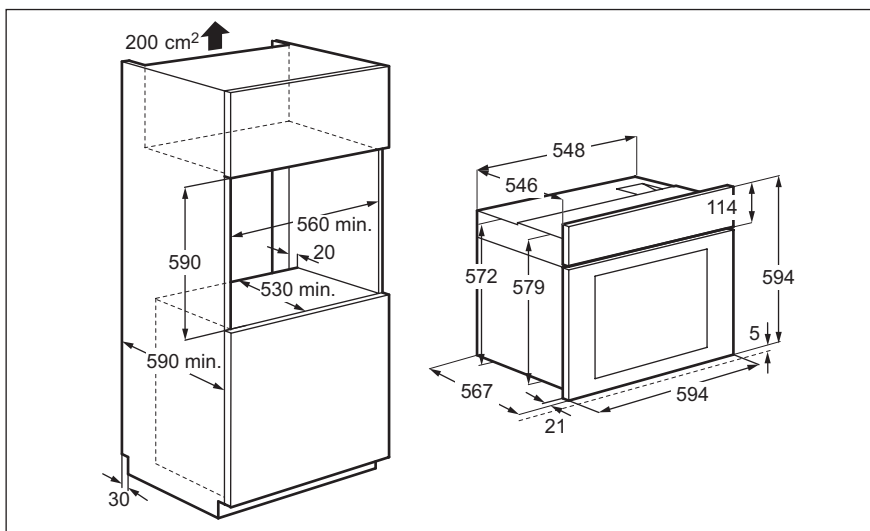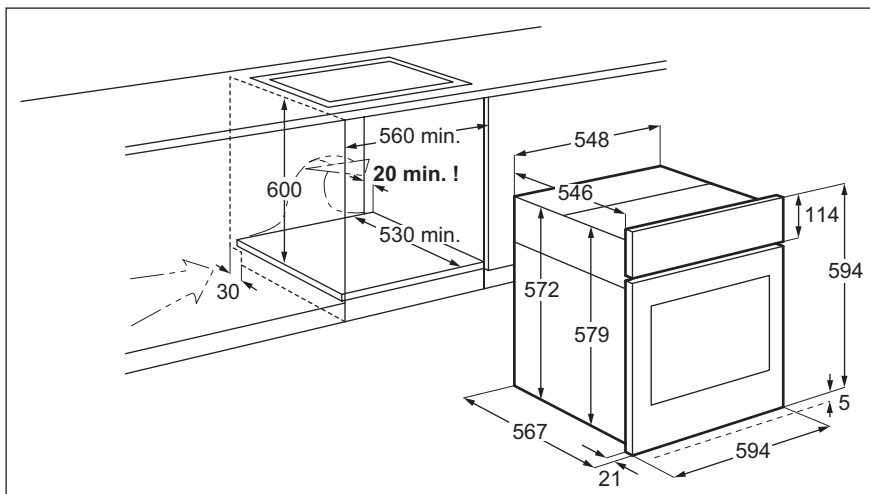

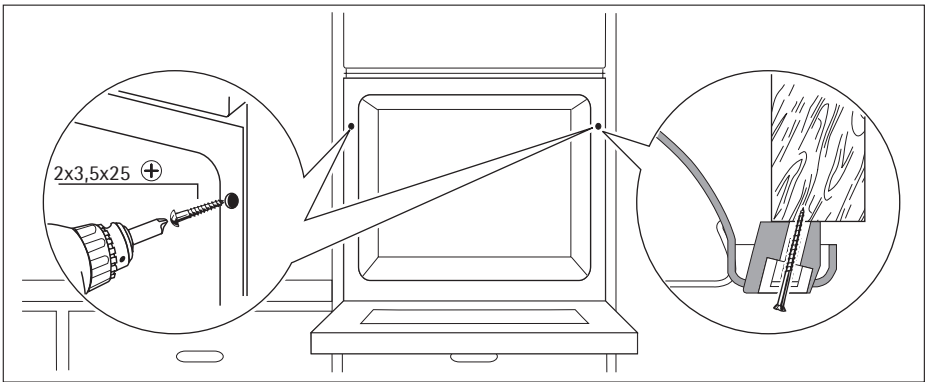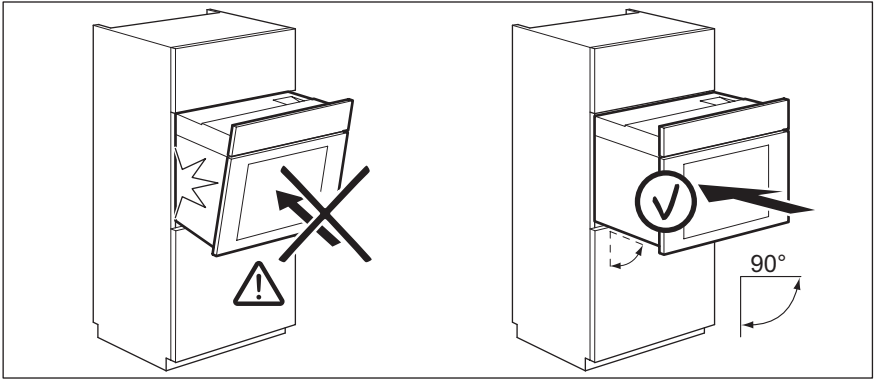

15. ^{GB} ^{IE} GREAT BRITAIN & IRELAND - GUARANTEE/ CUSTOMER SERVICE

15.1 Standard guarantee conditions:

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- Appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- Appliance has been used for normal domestic purposes only, in accordance with manufacturer's instructions.
- Appliance hasn't been serviced, maintained, repaired, taken apart or tampered with by person not authorised by us.
- Electrolux Service Force Centre must undertake all service work under this guarantee
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

Exclusions

- Damage, calls resulting from transport, improper use, neglect, light bulbs, removable parts of glass, plastic.
- Costs for calls to put right appliance which is improperly installed, calls to appliances outside United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Electrolux manufacturer that are not marketed by Electrolux

Service and Spare Parts.Please contact your local Service Force Centre: **08445 616 616**(Call will be routed to Service Force Centre covering your postcode area). For address of local Service Force Centre and further information, please visit: **www.serviceforce.co.uk** Before calling out an engineer, please ensure you have read the details under the heading "What to do if... / Troubleshooting". When you contact the Service Force Centre you will need to give the following details: Your name, address and postcode, your telephone number, clear concise details of the fault, model and serial number of the appliance (found on the rating plate), the purchase date. Please note a valid pur-

chase receipt or guarantee documentation is required for in guarantee service calls.

Customer Care.Please contact our Customer Care Department: Electrolux Major Appliances, Addington Way, Luton, Bedfordshire, LU4 9QQ or visit our website at www.electrolux.co.uk

Customer Care Department,	Tel: (Calls may be recorded for training purposes)
Electrolux	08445 613 613
AEG-Electrolux	08445 611 611
Zanussi-Electrolux	08445 612 612

For Customer Service in The Republic of Ireland please contact us at the address below:

Electrolux Group (Irl) Ltd, Long Mile Road, Dublin 12, Republic of Ireland
Tel: +353 (0)1 4090751, Email: service.eid@electrolux.ie

16. EUROPEAN GUARANTEE




GB This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed, the appliance guarantee will move with you subject to the following qualifications:-

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new

country of residence for this particular model or range of appliances.


- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence. The provisions of this European Guarantee do not affect any of the rights granted to you by law.

17. WWW.ELECTROLUX.COM

		
Albania	+355 4 261 450	Rruga "Kavajës", ish-parku auto-buzëve, Tiranë
Belgique/België/Belgien	+32 2 7162444	Raketstraat 40, 1130 Brussel/Bruxelles
Česká Republika	+420 261 302 261	Budějovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Strevelinsvej 38-40, 7000 Fredericia
Deutschland	+49 180 32 26 622	Fürther Str. 246, 90429 Nürnberg
Eesti	+37 2 66 50 030	Pärnu mnt. 153, 11624 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	08 92 68 24 33 (0.34€/min)	www.electrolux.fr
Great Britain	+44 8445 616 616	Addington Way, Luton, Bedfordshire LU4 9QQ
Hellas	+30 23 10 56 19 70	4, Limnou Str., 54627 Thessaloniki
Hrvatska	+385 1 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Long Mile Road Dublin 12
Italia	+39 (0) 434 558500	Corso Lino Zanussi, 30 - 33080 Porcia (PN)
Latvija	+371 67313626	Kr. Barona iela 130/2, LV-1012, Riga
Lietuva	+370 5 278 06 03	Ozo 10a, LT-08200 Vilnius
Luxembourg	+352 42 431 301	Rue de Bitbourg, 7, L-1273 Hamm
Magyarország	(06-1)467-3205 +361 252 1773	H-1142 Budapest XIV, Erzsébet Királyné útja 87
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn
Norge	+47 81 5 30 222	Risløkkvn. 2 , 0508 Oslo
Österreich	0810 955030	Herziggasse 9, 1230 Wien
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, 01-217 Warszawa
Portugal	+35 12 14 40 39 39	Quinta da Fonte - Edifício Gonçalves Zarco - Q 35 -2774-518 Paço de Arcos
Romania	+40 21 451 20 30	Str. Garii Progresului 2, S4, 040671 RO

		
Schweiz - Suisse - Svizzera	0848 848 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Gerbičeva ulica 110, 1000 Ljubljana
Slovensko	+421 2 32 14 13 34-5	Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Galvaniho 17/B, 821 04 Bratislava
Suomi	030 600 5200 Lankapuhelinverkosta 0,0828€/puhelu+0,032€/min Matkapuhelinverkosta 0,192€/min	
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabası caddesi no : 35 Taksim İstanbul
Россия	8-800-200-3589	129090 Москва, Олимпийский проспект, 16, БЦ "Олимпик"
Україна	+380 44 586 20 60	04074 Київ, вул.Автозаводська, 2а, БЦ "Алкон"

18. ENVIRONMENT CONCERNS

Recycle the materials with the symbol  . Put the packaging in applicable containers to recycle it.
Help protect the environment and human health and to recycle waste of electrical

and electronic appliances. Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.electrolux.com/shop



892960068-A-062013